




Conveyor to hammer mill Hammer mill Cyclon air fan cyclon air-lock screw conveyor pellet machine start
 1# feed transfer starting Crushing start The Dust blower start shut the wind start 2# feed transfer starting pellet machine start



1#进料输送启动 粉碎启动 除尘风机启动 闭风启动 2#进料输送启动 制粒机启动
4 1 2 3 7 6

Conveyor to hammer mil Hammer mill Cyclon air fan cyclon air-lock screw conveyor pellet machine start
 1# feed transfer stop Crushing stop The Dust blower stop shut the wind stop 2# feed transfer stoping pellet machine stop

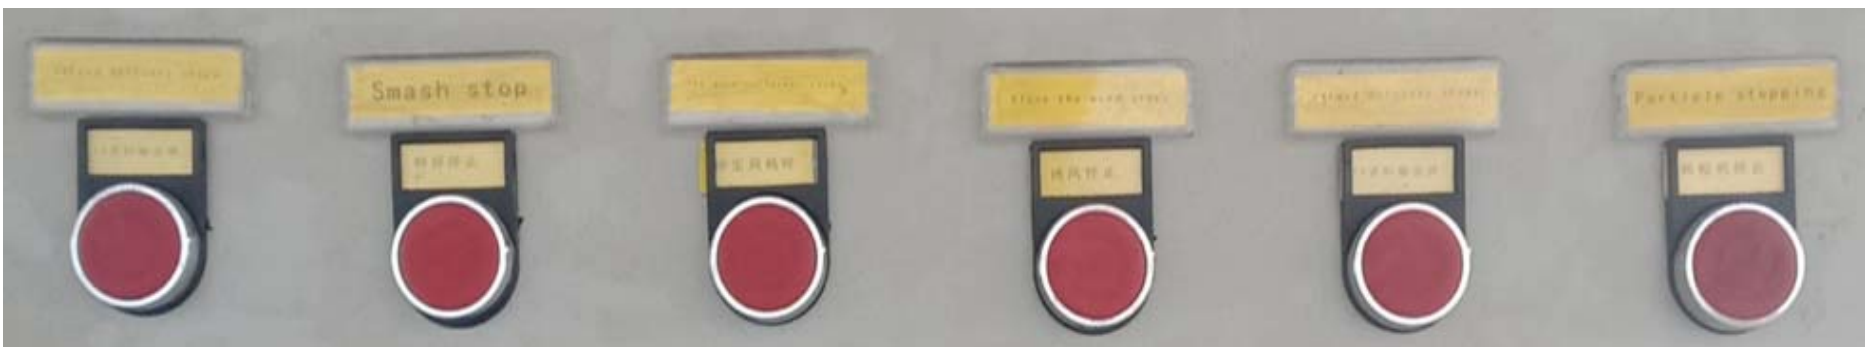

1#进料输送停止 粉碎停止 除尘风机停止 闭风停止 2#进料输送停止 制粒机停止

Oil pump start No use Conveyor to storage No use Screw conveyor



拨料启动 除尘启动 倾角输送启动 备用启动 频率调节（上料绞龙）
5 8

Oil pump stop Conveyor stop standby stop Emergency stop



拨料停止 除尘停止 倾角输送停止 备用停止 急停

